



FOOD AND PIE WARMER

GENERAL SAFETY INSTRUCTIONS FOR FOOD & PIE WARMER

- Do not use the appliance for other than its intended use.
- Never leave the appliance unattended when in use.
- The appliance should not be used by children or infirm persons and close supervision is necessary when used near such persons.
- Always switch off at power outlet before removing the plug. Remove by holding the plug - do not pull the cord.
- When the appliance is not in use, or prior to cleaning, always switch off the power and remove the plug.
- To avoid the risk of electric shock, do not immerse the plug, cord or any part of the appliance in water or any other liquid.
- Do not use near a stove or heat source and do not let the cord come in contact with any hot surface.
- Do not use the appliance with an extension cord unless that cord has been checked and tested by a qualified technician or if it is an extension cord that has been manufactured by a reliable electrical goods manufacturer and has not been altered in any way.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in anyway. Return to Aabco Corporate Events.

ENSURE THE ABOVE SAFETY INSTRUCTIONS ARE UNDERSTOOD BY ALL PERSONS WHO USE THE APPLIANCE

IMPORTANT SAFETY INSTRUCTIONS FOR THE FOOD AND PIE WARMER

- Only use the appliance on a flat, level and stable surface. DO NOT use on a wet surface.
- When in operation the appliance surfaces are hot. DO NOT touch the sides or glass of the cabinet while the appliance is in operation. Open glass doors and gain access to the cabinet using the handles on the doors.
- Shelves should be adjusted prior to operation. If adjustment is required while the appliance is operating, an oven mitt or similar heat protection glove should be used to prevent skin burns.
- DO NOT touch the heating element while the machine is in operation.
- ALWAYS turn off the appliance and allow to cool down before cleaning.
- Use a barely damp cloth to wipe the machine once it has cooled.
- Remove glass panels, shelves and crumb tray for cleaning. DO NOT place hot glass panels in cold water as they may shatter.
- DO NOT hose out the inside of the machine. Wipe the interior with a damp cloth.
- DO NOT use caustic substances to clean the warmer and do not allow caustic substances to make contact with any electrical components of the warmer.

www.aabco.com.au

12 Citrus Street, Braeside, Vic. 3195

Tel: 9587 8799