

OVERHEAD HEATER

SAFETY WARNINGS AND OPERATING INSTRUCTIONS

(Read all instructions carefully)

Safety Warnings

(Use only with LP Gas)

- The appliance is not designed for indoor domestic use
- The heaters can be used for either “Spot” or “Total” heating, depending on the requirements of the application.
- Ceiling clearances are important: The heater discharges the products of combustion from the top. Therefore, if the recommended ceiling clearance (1.2 metres) is not complied with, the ceiling will be discoloured or damaged.
- This heater shall not be installed in a position where it could create a fire hazard.
- If the heater fails to operate correctly, contact place of hire or authorised agent for advice and service.
DO NOT ATTEMPT REPAIRS YOURSELF.

Ventilation Requirements

Ventilation requirement must comply with AG601

- Do not place articles on or against the appliance
- Do not use or store flammable materials near this appliance
- Do not spray aerosols in the vicinity of this appliance while it is in operation

Heater units direct their heat via infra-red rays which discharge the heat energy upon striking a surface. They do not pass through solid materials. When installing the unit obstructions to the path of the rays must, therefore be taken into consideration, from both a heating and a safety point of view. For the most efficient heating and safety working conditions, obstructions in the path of the heat rays should be avoided where possible. Ceiling clearance is also an important factor. Materials stored near the heater must be at a safe distance as the infra-red rays heat solid objects quickly.

Mounting the Heater

1. The heater is mounted onto its mounting bracket and secured.
2. The mounting bracket with heater attached is then fastened to the stand with 2 securing nuts and bolts
3. The top portion of the stand with the heater attached can then be elevated to the required height and locked into position.

Extended height to centre line of fixing bolts is 2040mm.

Connecting the Gas

1. Fit the hose assembly with regulator attached to the heater
2. Place the LP Gas cylinder on the stand and retain with the safety chain provided
3. Screw the regulator into the POL valve and tighten securely
4. Test for leaks with soapy water.

To light

1. To light heater, ensure both control knobs are on high flame.
2. Push in right hand control knob and hold for 5 seconds then place lighted match to right hand burner.
3. To light left hand burner, repeat procedure above.
4. Turn off at the LPG cylinder.

Shutting down the Burner

1. Turn LP Gas cylinder valve clockwise to **OFF** position.

Do not touch hot surfaces and allow heater to cool before cleaning (if required)

